




PowerTop Install Instructions:

*patent pending design

Welcome to the SPIDERWEBSHADE® JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep® and SPIDERWEBSHADE® provide everything you will need to make this install a breeze.



1

Feed the 2 header rail straps in-between the windshield and the header rail. Be sure the buckle is facing down. Use the buckle to fasten taut.

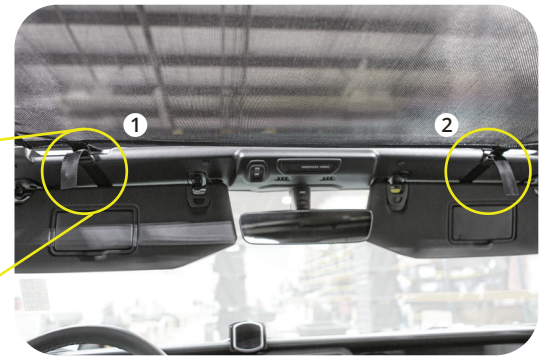


2

Locate the correct (10) factory T25 screws to remove and add the custom Spider-Nubs then replace the (10) T25 screws. 5 per side.

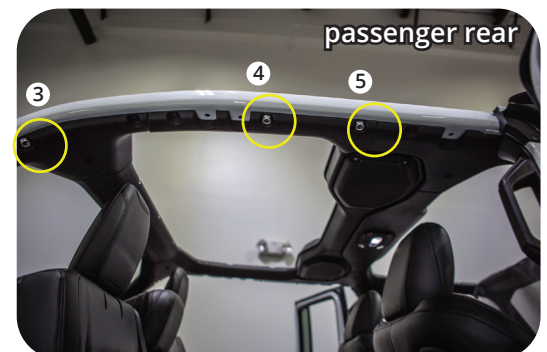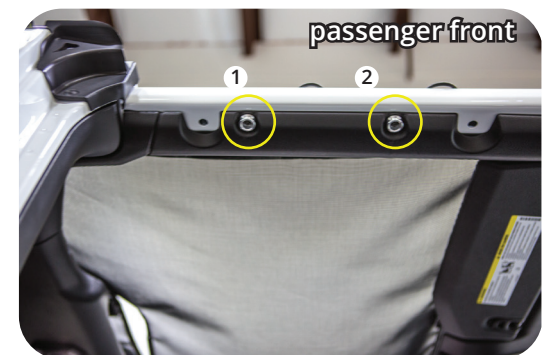

3

Use the leverage strap to pull the shock cord in-between the Power top and the roll cage. This will be a snug fit.

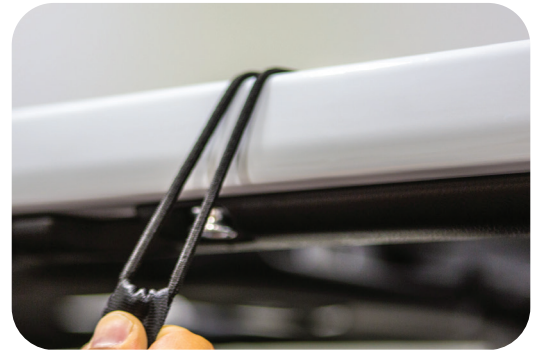

4

Attach the (10) shock cord loops to the new SpiderNub mounting locations and your install is complete.



The Original
SPIDERWEBSHADE

