

MAXIMUS-3

SHOVEL MOUNT / CLAMPS (Mounts Directly to Hi-Lift Jack)

INSTALLATION GUIDES

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED TO DISASSEMBLE YOUR JEEP.

Parts List: Qty

Shovel Clamps 2


Tools Required:

9/16 Wrench/Spanner



INSTALL AS SHOWN IN THE PICTURES BELOW:

Using the Flanged Nuts and Washers provided, mount the Shovel Clamps to your Hi-Lift Jack as shown below. Use your shovel to determine top and bottom clamp locations. Clamp your shovel in place using the Star Knob Nuts as shown.

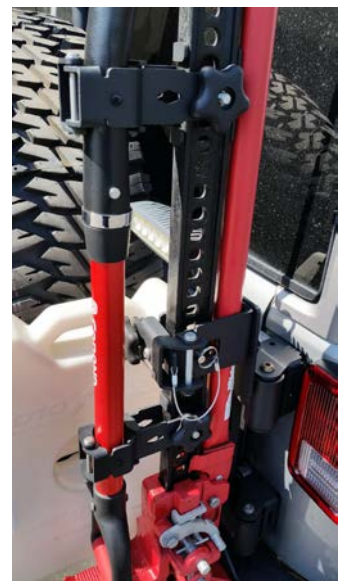

Your installation is complete. If you have questions regarding this installation please contact us at info@maximus-3.com or call 248 821 6654.