

MAXIMUS-3



10A/X & HARD ROCK RUBICON

JK Tire Carrier Accessories Hi-Double Pax Mount

THIS OPTIONS IS NOT COMPATIBLE WITH JK HARDTOP ROOF

INSTALLATION GUIDES

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED TO DISASSEMBLE YOUR BUMPER.

Parts List:

Hi-Double Pax Mount Assembly

Qty

1

Tools Required:

- Basic wrench and Drive Sockets

Hardware Component List:

1" U-Bolt

2

1-1/2" U-Bolt

2

INSTALLATION STEPS

(1)- REMOVE YOUR SPARE TIRE/WHEEL


(2)- SECURE THE ROTOPAX MOUNT TO THE TIRE CARRIER TUBE

Using the U-Bolts provided strap the Double Pax Mount bracket to the Tire Carrier tube as shown below. Please note the mount goes on the spare tire side – between the Tire Carrier tube and the spare tire in the mounted position.



(3)- MOUNT YOUR ROTOPAXS

Mount your Rotopaxs following ROTOPAX's instructions provided.

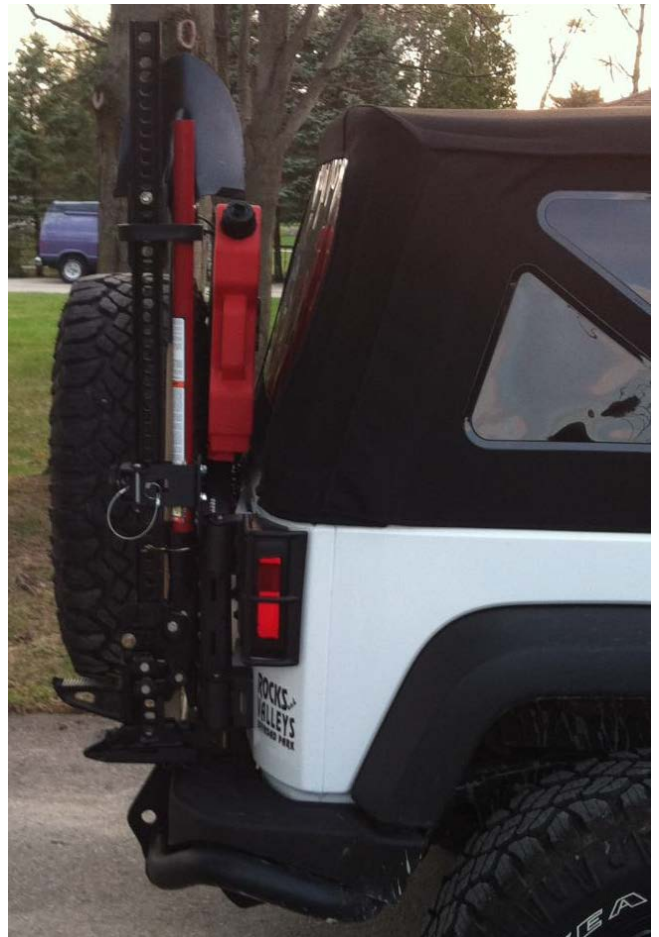



USE YOUR ROTOPAX CANS ACCORDING TO MANUFACTURER'S INSTRUCTIONS.

Your installation is complete. If you have questions regarding this installation please contact us at info@maximus-3.com or call 248 821 6654.