


TOM WOODS CUSTOM FRONT 1350 DRIVE SHAFT FOR JEEP WRANGLER JL

A MEASUREMENT IS REQUIRED IN ORDER TO BUILD THE DRIVE SHAFT. PLEASE MAKE SURE THE LENGTH IS TAKEN FROM THE VEHICLE WITH ALL THE WEIGHT DOWN ON THE WHEELS. DO NOT TAKE MEASUREMENT WITH VEHICLE ON A LIFT.

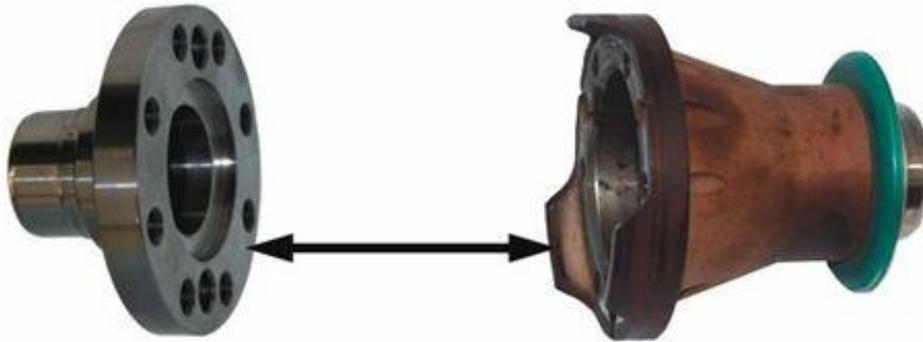

Measure from lip of flange on transfer-case out-put to face of flange at differential.

PLEASE NOTE: DRIVE SHAFTS SHIPS PAINTED BLACK – NOT POLISHED AS SHOWN BELOW.

